

GameChanger™ TRAPS

Most Versatile Trap on the Market

Game Changer Jr Instruction Manual



Ahead of the Game

Contact Us:
(501) 286-3766
sales@bullcreekoutdoor.com
www.bullcreekblinds.com



Table of Contents

- 1 Lifting Panels from Trailer.....1
- 2 Setting Gates and Panels.....2
- 3 Wiring.....2
- 4 Electronics.....3
- 5 Testing and Setting Gates.....4
- 6 Trapping and Moving Trap.....4
- 7 Trap Variation.....5
- 8 Required Trap Maintenance.....6
- 9 Troubleshooting.....6

1 Lifting Panels from Trailer

- Unhook trailer from vehicle/UTV and remove straps from trap.
- Extend front jack all the way out.
- Unpin and slide rear jack out, Rotate, and Extend jack all the way to ground.
- On the driver's side of trailer, locate the **Helper Jack**. Extend the foot approximately half way out of jack.
- Locate, pull back, and lock in place spring pins on front and rear holding hinge panel in place.
- Push hinge panel with gates and panels across trailer frame until it hits the stops.
- Pick up on the hinge panel with hand rail until it rests on helper jack.
- Use helper jack to lower panels down until they are vertical and rest on the ground.
- Raise front and rear jacks and slide rear jack back to trailer frame.



2 Setting Gates and Panels

Configuration of Gates and Panels can be deployed in several variations. Use the configuration that best suits your trapping need for each individual trapping site.

It is suggested two people lift and move gates. If a Gate Caddy has been purchased, one person can slide panels or gates onto the Caddy and roll into place.



- Take off first panel and use pins to secure top and bottom of panel to the hinge panel on rear of trailer.




- Remove each consecutive panel and gate and pin in like manner as above, shaping trap into a circle formation until the last panel is pinned to other side of hinge panel.



3 Wiring

Wiring Configurations will also vary depending on the gate configuration.

- Unwind all the cords from Antenna Pole.
 - » All traps come with two wires to run to two gates.
- Run wire around trap to gate, clipping into Quick Clips located at the top of the panels.

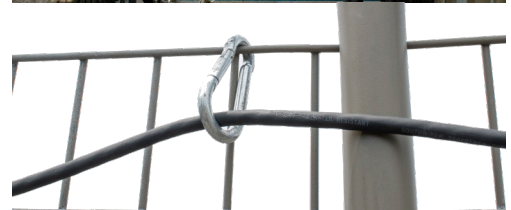


- Locate wiring from latch, pull forward attaching cord and latch on the outside of the trap.
- Tighten cord back up by pulling excess back through the Quick Clips and wrapping back up on the Antenna Pole.




4 Electronics

- Attach Antenna to antenna pole by tightening bolts around pole until secure.
- Plug yellow power/signal wire into the 3-way port located on the camera.
- Mounting Camera: Remove pin from bracket on pole, insert bar on camera into bracket, adjust level by tightening bottom screw, place pin back into bracket to hold camera securely.
- Attach the Antenna cord with the black cord on the camera to receive cellular signal.
- After camera has been connected for approximately 5 minutes, it should be functioning and ready to view from app. (Please refer to *Phone and App Instruction Guide* for assistance with app function and how to operate the camera.)
- Position the Solar Panel to the South by removing the set pin, rotating the solar panel into place, and tighten the bolt lever.

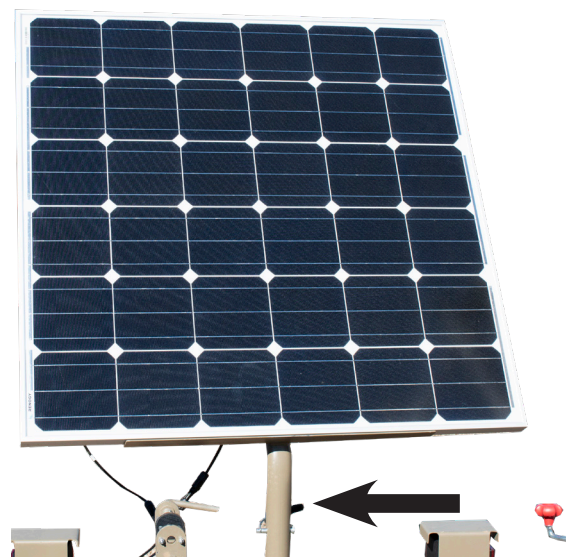

5 Testing and Setting Gates

- To test latch(es): Push latch to closed position; go to camera app; locate the drop gate icon (see *Phone and App Instructional Guide*); **Alarm Out1** screen will appear (Make sure **Close** is selected, if not click Close); click **Manual** to make latch fire. Remember after dropping gates, always click back to **Close** in the app. (Latches left on Manual can drop gates unexpectedly if camera reboots.)
- After testing latches, Quick Clip chain to link located on gate.
- Raise Gate(s) into position (suggested for two people to raise gate). Lift gate up and click chain link into latch.

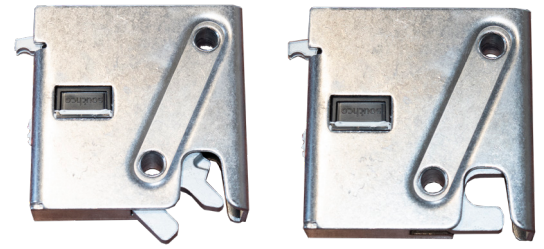

6 Trapping and Moving Trap

- Use walk gate to access inside of trap. **NEVER** walk under raised gates. Use the walk gate to place bait in trap. Refer to the *S.P.E.A.R. Process* for proper baiting procedures.
- To increase success, utilize the **S.P.E.A.R. Process**.
- Reverse the order of set-up to take down trap and move to another pre-bait site.



For additional instructions on how to set-up a Game Changer Jr visit our website.

7 Trap Variation (Only available with additional options purchased.)



2 Gates Across



3 Gates Front



4 Gates Across



4 Gates Front

- Setting Gates side-by-side requires a **Gate Coupler**. Pin each gate onto sides of Gate Coupler.
- To drop two gates with one latch a Gate Coupler with Latch mounted on top would be necessary.
- Click chain link into latch, lift gate, then use Quick Clip to latch onto the wire mesh.
- Load Out Option comes with a walk-thru panel, panel, 2 gate couplers, and chains. Set trap up with gate coupler on either side of walk-thru panel. Pin additional walk-thru panel and panel on gate couplers. Use chains to hook on load out trailer.



8 Required Trap Maintenance

- Grease all grease points every time trap is set out: 3 jacks and 4 Rollers on Hinge Panel
- Check fluid level in battery once every 30 days
- Check wheel bearings and grease every 6 months
- Check to make sure all wiring has a good connection and free of corrosion every time trap is set out
- Keep a moisture wicking pack inside Camera Box always

9 Troubleshooting

- If there is no cell signal for your phone, you can also trip the latch by touching the white wire (male end) in the battery box to Positive side of battery terminal.