



**Nelson & Nelson Mfg.**  
2200 Fowler Ave, Suite D  
Jonesboro AR 72401  
870-268-6393 : Cell 219-1019

Installation Instructions 10-1-19

**Model RYK-BRKL**

**Ryker Aluminum Brake Lever Assembly**

## Steps needed to install your Brake Lever

- 1.- Remove the Air Filter Cover below as shown on the right-hand photo. Unlatch the Cover from below.  
Simply lift off that panel.



- 2.- Remove the bolt as shown using a T-30 Torx wrench.



- 3.- Then remove the T-30 Torx screw that holds the cable to the Brake Lever as shown below.



4.-Then lift the cover and using an 8mm socket. Remove the 4 bolts holding the plastic cover over the Brake Lever Shaft. We removed the first bolt in the photo. Then remove the Shaft Cover as shown below.



5.- Then remove the Brake Lever from its cradle.



6.-Next install the new Brake Lever Assembly in reverse of how you disassembled the original. Then reinstall the shaft cover. Install the 4 bolts but do not tighten them at this point.



7.-Reattached the brake cable which may require you pull it downward to place over shaft.



**8.-Once the cable is reconnected then tighten down all four bolts. Then lower the cover and reinstall the T-30 screw**



**9.-Reinstall the Air filter cover**



**10.-Your completed new Brake Lever is installed!**



**We thank you for purchasing one of our New Ryker Products. We know today the needs for Quality Accessories and we have solved that demand with a stylish Products that compliments the design of your Ryker®!**

[spyderextras.com](http://spyderextras.com)