


Installation Instructions for BULLETIN BOARD CABINETS

1. Layout and identify all parts.
2. Select desired height cabinet is to be mounted. Chalk a horizontal line on wall parallel to floor.
3. Fasten Z-bar hanger to wall with suitable fasteners (not furnished) approximately 2'0" O.C.
4. Set cabinet on Z-bar hanger and mark a line at bottom of unit for angle clips.
5. Remove unit from wall and fasten angle clips to wall with suitable fasteners (not furnished) approximately 2'0" O.C. (Slotted hole goes to wall.)
6. Hang cabinet on Z-bar hangers and fasten at bottom to angle clips with screws furnished.

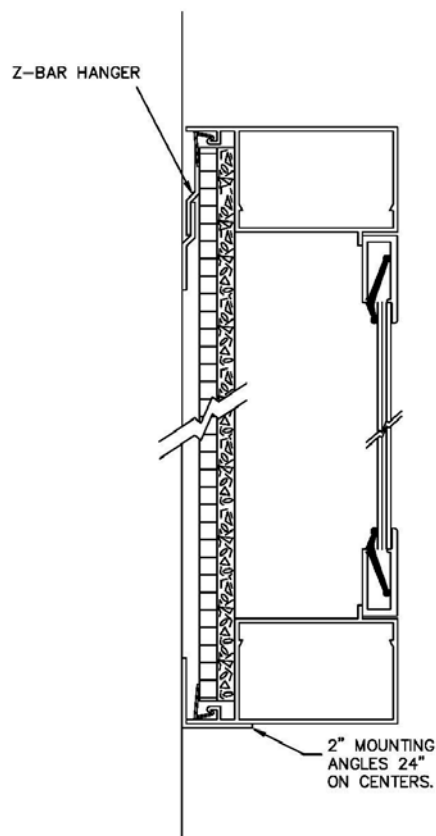

CLARIDGE PRODUCTS AND EQUIPMENT, INC.
P. O. Box 910
Harrison, Arkansas 72602-0910
Phone: 870-743-2200 Fax: 870-743-1908
Toll Free: 800-434-4610
e-mail: claridge@connectbyclaridge.com