


## EVOLVE NOTICE BOARD INSTALLATION - Layout

1. Measure approximately 1" down from desired top edge of board.
2. Strike a level line at this location long enough to mount all boards to be hung at this level.
3. Strike a second level line below the top hanger location for the lower hangers, 4-1/2" less than the overall height of the board. For example if the board being installed is 60" overall height the location for the lower hangers will be 55-1/2" below the top hanger location.

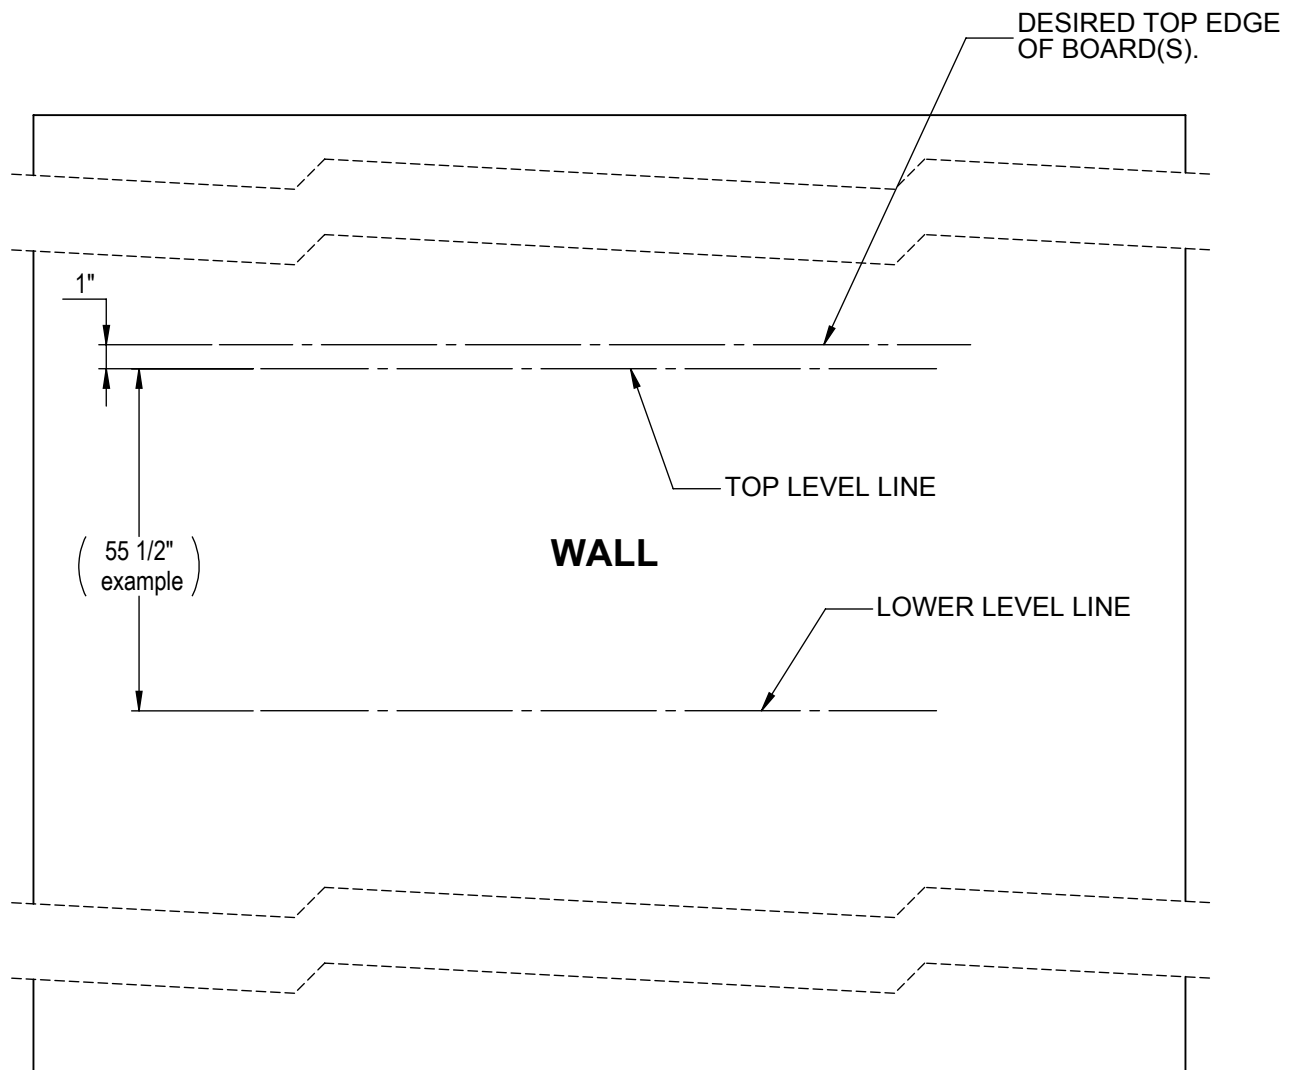


## EVOLVE NOTICE BOARD INSTALLATION - Hardware kit

The hardware kit consists of at least two of the following items:

1. Z-clip - part no. 2739-clip
2. Dual Lock\* Washer - part no. HTA152
3. Dual Lock\* Tab - part no. HTA153


The quantity of each item will vary with board size.

Screws and hardware to attach hangers to the wall should be appropriate for the type of wall construction and are to be supplied by the installer.

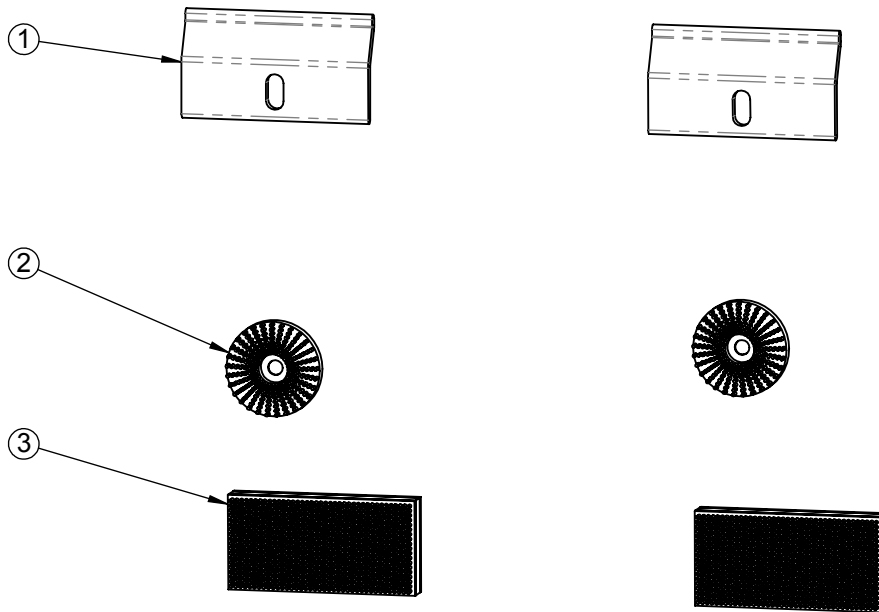

## EVOLVE NOTICE BOARD INSTALLATION - Mounting hangers

1. Using screws and necessary anchors appropriate for the type of wall construction, mount the top z-clips to the wall along the top level line as shown below. The clips should be evenly spaced such that they will be located inside the trim of the board being installed.  
*(Screws and anchors not included.)*
2. Repeat the process in step 1 to mount the Dual Lock\* washers at the lower level line.
3. Once the hangers are mounted, press the Dual Lock\* tabs onto the Dual Lock\* washers.

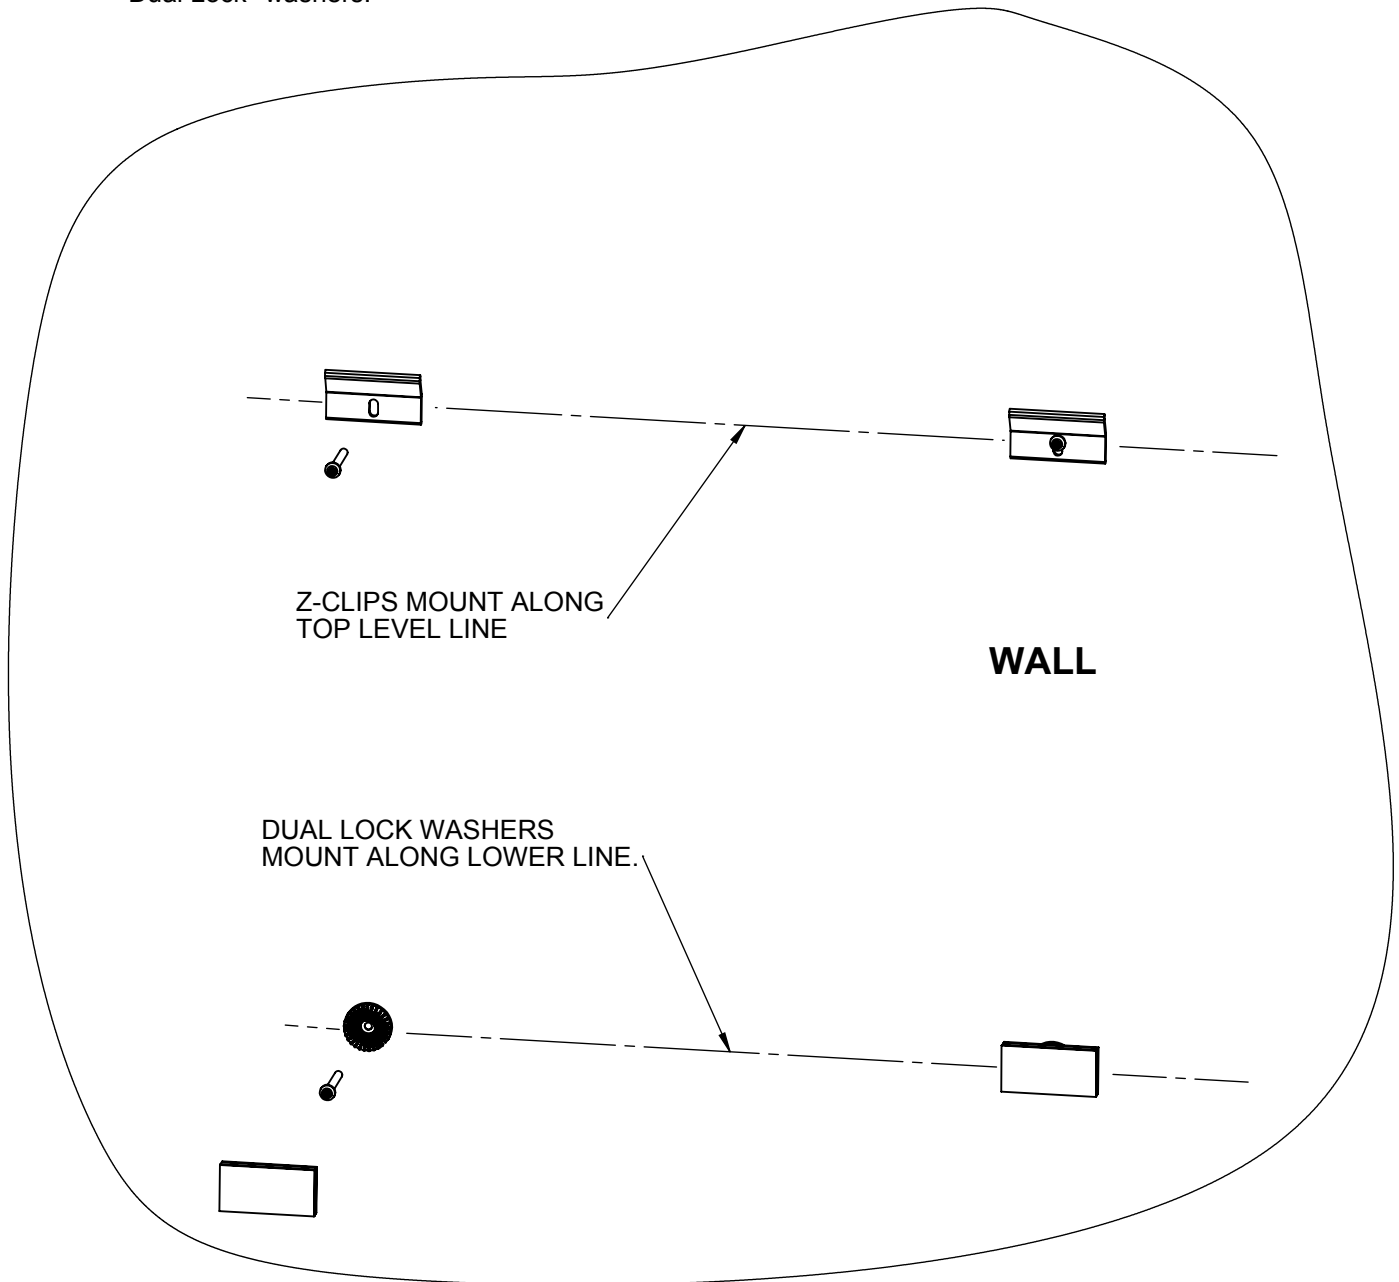

# EVOLVE NOTICE BOARD INSTALLATION - Board mounting

1. Peel backing off of lower two pads exposing adhesive surface.
2. Hang board on z-clips.
3. By hand, press the face of the board at the approximate locations of Dual Lock\* tabs to seat adhesive backing on the back surface of board. Light but firm pressure is all that is needed to prevent damaging the face of the board.

**\*\*When installing tack or cork boards ensure hands are clean to prevent marring cork or fabric surface.\*\***

