



CONNECT MOBILE MARKER/TACK BOARD ASSEMBLY

| CONNECT MOBILE ASSEMBLY | | | |
|-------------------------|-------------------|------------------------------|-----|
| ITEM | CLARIDGE PART NO. | DESCRIPTION | QTY |
| 1 | | Board and Upright Assembly | 1 |
| 2 | | Base | 1 |
| 3 | HCA140 | Caster – Non-locking | 2 |
| 4 | HCA135 | Caster – Locking | 2 |
| 5 | HSC046 | Screw, #8x2" PPH Type A | 4 |
| 6 | HCS055 | Screw, #8x0.75" PPH Type A | 4 |
| 7 | CE1114 | Marker Tray (see note) | 1 |
| 8 | 2000302 | Screw, 5/16" 18x2 Round Head | 4 |

NOTE: NO MARKER TRAY INCLUDED WITH UNITS HAVING A FULL LENGTH PANEL.

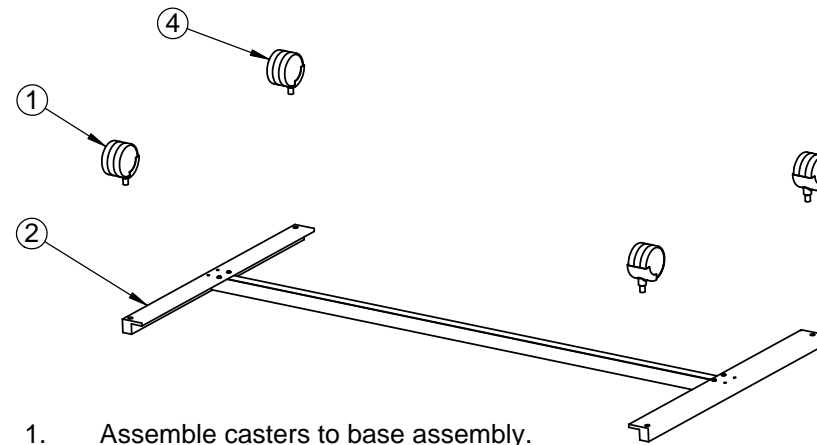

1. Assemble casters to base assembly.

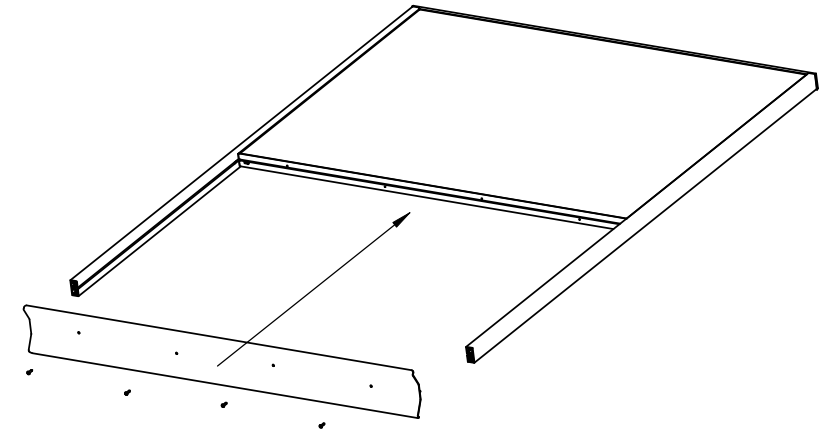

2. Align marker tray with holes along bottom side of board trim. Attach marker tray to bottom surface of board trim with provided #8 x 0.75" long screws. (Skip if no marker tray included in order.)

3. Lay mobile board assembly on a flat surface. Assemble base and caster assembly to mobile board assembly using provided #8 x 2" long screws and the 5/16" 18x2 screw. (Half and full length boards shown)

