


INSTALLATION INSTRUCTIONS MAGNETIC GLASS MARKERBOARD – INVISI-MOUNT

1. Determine and mark desired height for mounting the magnetic glass markerboard
2. Measure down ¾" from designated height and strike a horizontal line.
3. Attach Z-bar hanger to wall using appropriate screws. Note: Slotted holes in hanger bar ensure easy alignment.
4. Position board on top of hanger and engage with hanger on back of glass markerboard.
5. Make a mark at bottom corners of glass board and carefully remove board from wall.
6. Measure in and up approximately 2-to-3" from marked corners and install dual-lock (hook-and-loop) 'disk' (washer) on wall using appropriate fastener. Press dual-lock strip (tab) firmly into disk on wall making sure mating is secure.
Note: Number of hook-and-loop assemblies furnished varies with board size. **Example:** 4' boards get 3 dual-lock sets; 6' size gets 4; 8' gets 5 and 10' gets 6. (Dual-locks should be evenly spaced along the bottom of board).
7. Remove tape from hook and loop assembly.
8. Reinstall board, engaging hanger on back of board with hanger on wall.
9. Press in at the bottom allowing the back of the glass board to stick to the exposed adhesive on the hook and loop assembly.

Note: Use caution when positioning glass markerboard panels next to each other. Because the weakest point of tempered glass is along the edges, edges should be protected as much as possible. Take care not to bump, rub, or grind edges together as fracturing may occur. Claridge will not be held responsible for damage caused by improper handling during installation.

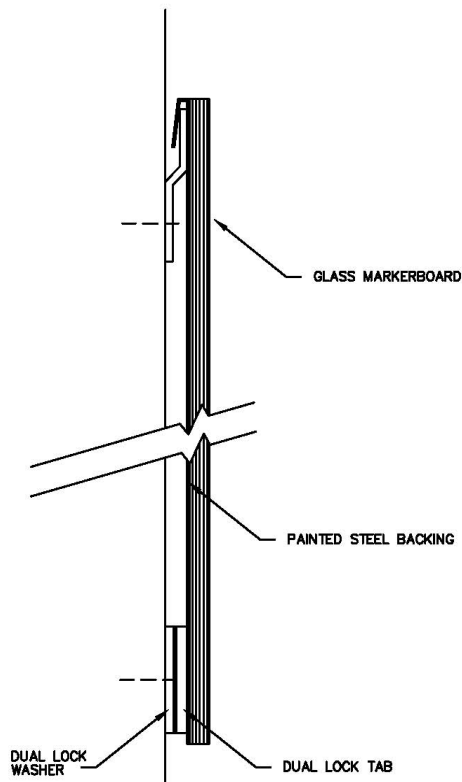

CLARIDGE PRODUCTS AND EQUIPMENT, INC.

P. O. Box 910

Harrison, AR 72602-0910

Phone: 870-743-2200 FAX: 870-743-1908

www.claridgeproducts.com