


EVOLVE MARKER BOARD - Hardware and Installation Layout

- 1. Measure approximately 1" down from desired top edge of board.
- 2. Strike a level line at this location long enough to mount all z-clips.
- 3. Strike a second level line below the top hanger location for the lower hangers, 1-7/16" less than the overall height of the board. For example if the board being installed is 60" overall height the location for the lower hangers will be 58-9/16" below the top hanger location.

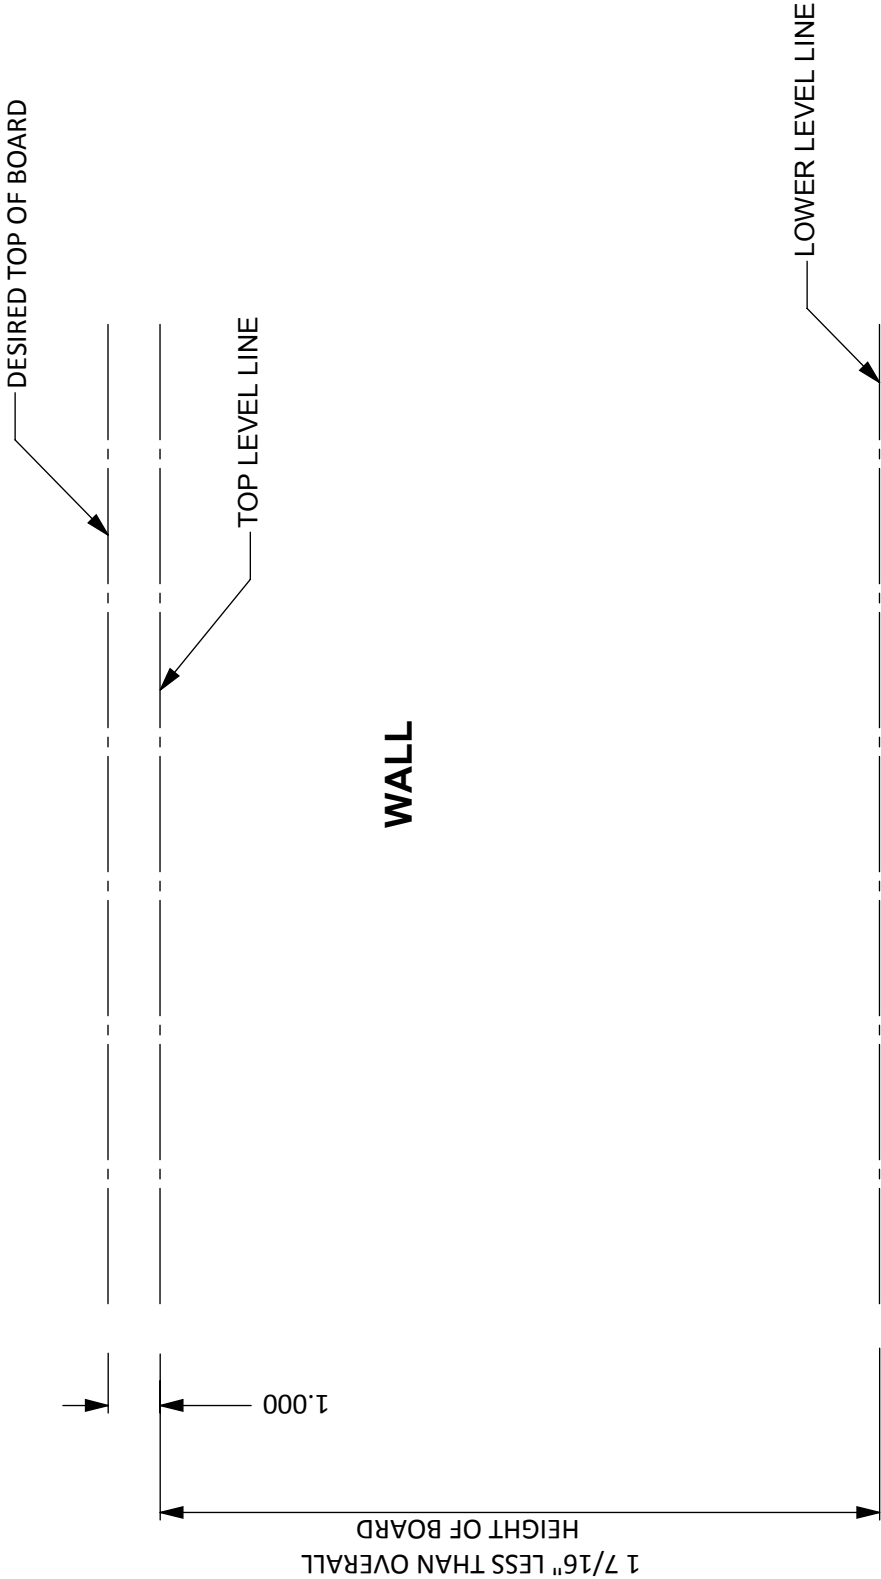

EVOLVE MARKER BOARD - Mount Hardware

1.

Locate the hardware pack. The hardware consists of:

 - 2739 z-bar clips
 - M160 angle bracket
 - #8 self drilling screws (not to be used to attach hardware to walls)

Quantities of the above components is based on the size of the board to allow a horizontal spacing of approximately 24" on $\bar{C}$.

Anchors to attach the mounting hardware to walls shall be appropriate for the type of wall construction shall be provided by the installer.

2.



Tools required:

 - Drill
 - Drill bits appropriate for installing wall anchors
 - #2 phillips driver tip for drill
 - Level
 - Tape measure
 - Rubber mallet

3.

Using appropriate hardware for the wall construction, fasten the z-clips to the wall at the top level line and the angle clips to the wall at the lower level line. For boards greater than 48" wide, space the clips at approximately 24" on $\bar{C}$. For boards less than 48" wide the clips can be evenly spaced across the width of the board.

INCLUDED
HARDWARE

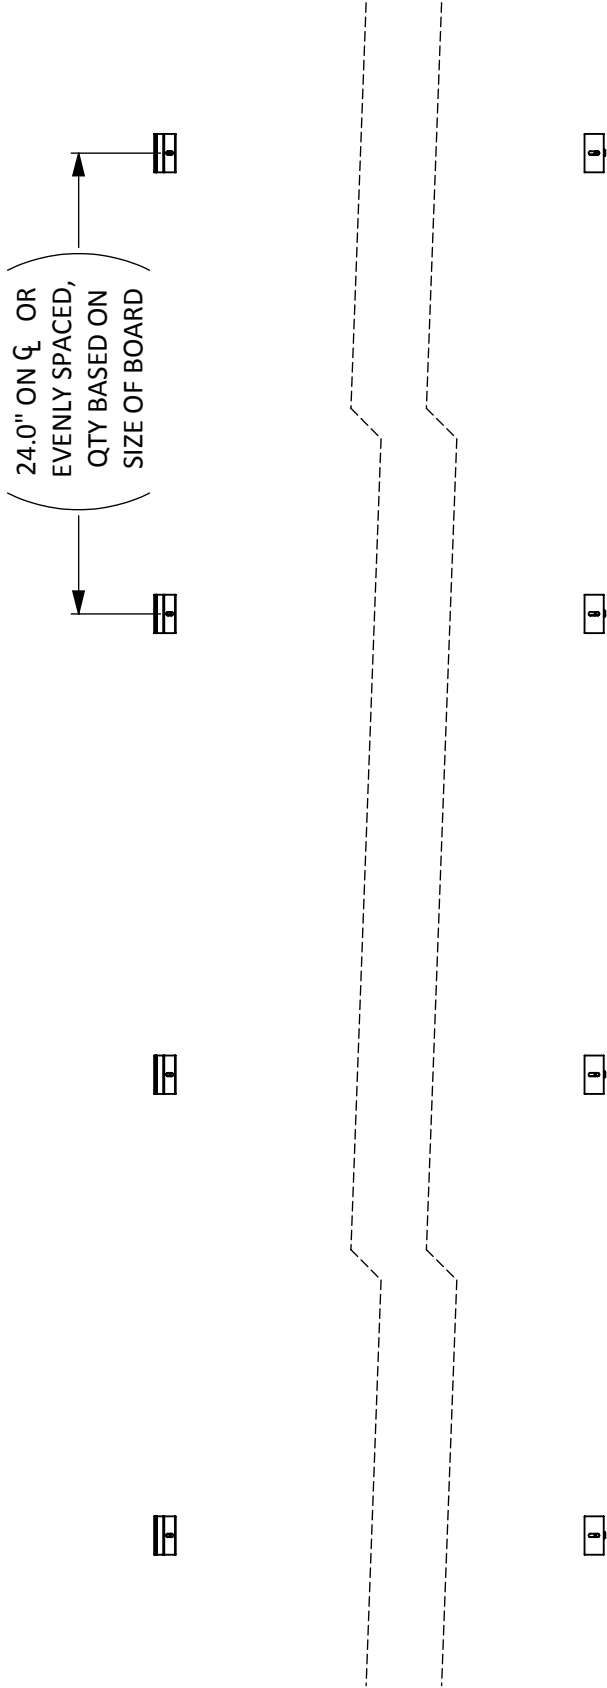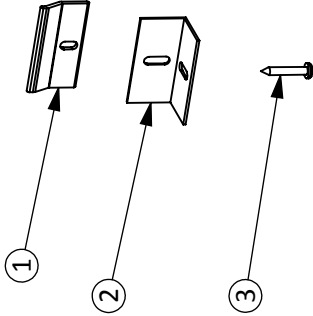

EVOLVE MARKER BOARD - Tray Assembly and Hanging Board

1. Assemble the marker tray to the board before mounting the marker board on the wall.
2. To assemble the marker tray, fit the legs of the marker tray into the channel along the lower edge of the board snapping the tray into place. For safety and quality purposes the tray has a very snug fit. Striking the bottom side of the tray with a rubber mallet can be done if assembling the tray is difficult. Strike only in the area directly in line with the board to prevent bending the tray.
3. Hang the board from the z-clips by the lip built into the back surface of the top trim.
4. Tap the angle mounted to the wall at the bottom of the board up until they touch the bottom surface of the marker tray.
5. Drive one #8 screw through the slot in the angle clip and into the tray and lower trim until flush with the bottom of the clip, securing the board to the wall.

